Operator's manual (EPA III)
Manuel d'utilisation (EPA III)
Manual de instrucciones (EPA III)

445 445e 450e

Please read the operator's manual carefully and make sure you understand the instructions before using the machine.

Lire attentivement et bien assimiler le manuel d'utilisation avant d'utiliser la machine.

Lea detenidamente el manual de instrucciones y asegúrese de entender su contenido antes de utilizar la máquina.

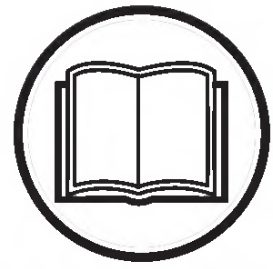

English (2-43)
French (44-87)
Spanish (88-129)

115 13 81-49 Rev.1 2009-02-13

Downloaded from www.Manualslib.com manuals search engine

Dear Customer,

Thank you for buying an AEG microwave oven and putting your trust in the AEG brand name.

Before using your AEG microwave oven for the first time, please read the instruction book thoroughly. This will enable you to take advantage of all the features that the appliance offers. It will also ensure trouble-free operation and minimize unnecessary service calls.

Important information concerning your safety or the operation of your appliance is noted by this symbol and/or mentions words such as «**Warning**», «**Take care**». Be sure to follow all instructions carefully.

Throughout the manual, this symbol guides you step by step when operating the appliance.

This symbol indicates further information concerning the use of the appliance.

The clover indicates energy-saving tips and hints for environmentally friendly use of your appliance.

In the event of malfunctioning, please follow the instructions given in the section «What to do if...»

Downloaded from www.Manualslib.com manuals search engine

Important safety instructions

Read these instructions carefully. Please put them somewhere safe for future reference.

1. Only use attachments/accessories specified by the manufacturer.
2. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

3. Unplug this apparatus during lightning storms or when unused for long periods of time.
4. Do not install this equipment in a confined space such a book case or similar unit.
5. No naked flame sources, such as lighted candles, should be placed on the apparatus.
6. If the remote control will not to be used for a long time, remove the batteries. Use the remote control carefully. Do not drop the remote control on the floor. Keep it away from moisture, direct sunlight, and high temperatures.
7. Used or discharged batteries must be properly disposed of or recycled in compliance with all applicable laws. For detailed information, contact your local solid waste disposal authority.
8. Follow all warnings and instructions marked on the product.
9. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
10. Do not use this product near water.
11. Do not place this product on an unstable cart, stand or table. The product may fall, sustaining serious damage.
12. Slots and openings are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register or in a built-in installation unless proper ventilation is provided.
13. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
14. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be stepped on.
15. If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.

Downloaded from www.Manualslib.com manuals search engine

TABLE OF CONTENTS

Introduction

Welcome/Registration of Your TV 2
Safety/Precautions 3
Table of Contents 4
Features 4
Basic Cable TV Hookups 5
Basic Antenna Hookups 6
Basic TV to VCR Hookup 7
Basic TV and Remote Operations 8
TV Remote Buttons 9

Setup MENU

✧ Setting the Language Control 10
✧ Setting the TV's Clock (AutoChron) 11
✧ Using the Tuner Control 12
✧ Using the Auto Program Control 13
✧ How to Use the Channel Edit Control 14
✧ How to Manually Fine Tune Channels 15
✧ Using the External (Input Naming) Control . . .16

Onscreen MENU

✧ Adjusting the TV Picture 17
✧ Activating Contrast Plus (Black Stretch) Control 18
✧ Activating Noise Reduction (Picture) Control .18
✧ Using the Sleep Timer Control 19
✧ Setting the TV for Closed Caption 20
✧ Setting the TV's Wakeup Time 21
✧ Selecting the TV's Wakeup Channel 21
✧ Selecting the TV's Wakeup Alarm 22
✧ Setting the TV's Wakeup Volume 23
✧ Activating the Demo Control 24
✧ Using the TV's Night Light 25

AutoLock™

✧ Understanding the AutoLock Feature 26
✧ Setting the AutoLock Access Code 27
✧ Setting the Blocking Options 28
✧ Using the Channels Blocked Options 29
✧ Block Programming using Movie Ratings 30
✧ Block Programming using Parental Guideline .31
✧ Using the AutoLock Review Screen 32

Sound

✧ Setting Treble and Bass Boost Controls .33
✧ Setting the TV for Stereo Programs 34
✧ Using the Volume Bar Control 35
✧ The Input Control and Audio/Video Input Jacks .36

Remote Control Operation

Using the AutoPicture™ Control 37
Using the AutoSound™ (AVL) Control 38
Using Surf™ (Alternate Channel) 39

General Information

Tips if Something Isn't Working 40
Glossary of TV Terms 41
Index 41
Factory Service Locations 42-43
Warranty 44

Here are a few of the special features built into this new Color Television:

AutoLock™ feature allows you to block the viewing of certain channel or external audio/video connections where you might not want your children viewing inappropriate material.

Infrared Remote Control works your TV set.

Standard broadcast (VHF/UHF) or Cable TV (CATV) channel capability.

Stereo TV with built-in audio amplifier and twin speaker system for receiving TV programs broadcast in stereo sound. This TV can actually detect if the signal being received is Stereo and adjust for it.

Closed Captioning allows the viewer to read TV program dialogue or voice conversations as onscreen text.

Automatic Programming of Channels for quick and easy selection of favorite stations available in your area.

Onscreen Features (in either English, French, or Spanish) show helpful messages for setting of TV controls.

Audio/Video Jack Panel for direct connections with VCRs (or other video accessories) providing quality TV picture and sound playback.

Wakeup automatically turns the TV ON at a preset time, and channel.

Sleep Timer automatically turns the TV OFF at preset times.

AutoPicture™ allows you to set the picture color, tint, contrast, etc. for various types of programming such as Personal (picture controls the way you set them), Sports, Movies, or Weak Signals with the push of one button.

AutoSound™ controls allow you to set the sound controls for various types of listening programs such as Personal (sound controls the way you set them), Theater, Music, or Voice with the push of one button.

NOTE: This owner's manual is used with several different television models. Not all features (and drawings) discussed in this manual will necessarily match those found with your television system. This is normal and does not require contacting your dealer or requesting service.

AutoChron™, AutoPicture™, AutoSound™, Surf™, and AutoLock™ are all registered trademarks of Philips Consumer Electronics Company.

Copyright © 1999 Philips Consumer Electronics Company. All rights reserved.

Downloaded from www.Manualslib.com manuals search engine

SUBJECT **PAGE**

6. INSTALLATION **67**
Introduction 67
Connections (general) 68
Rear Panel Layout 69
Connector Pin Allocations :-
Resolvers 70
Motor Control 71
Stp-Trk / Alarms 72
Communication Ports 72
Remote Port 72
Test Ports 73
Serial Port RS422/423 Setting 74
Serial Port Usage 74
Tracking Signal Connections 75
Resolvers (pointing angles) 75
Southern Hemisphere 76
Tracking Signal Input 76
With IBR-L 76
Without IBR-L 76
Operational Checks 77

7. FAULT FINDING **79**
Introduction 79
Fault Symptoms :-
INTRAC doesn't appear to power up 80
Replacing display back-light 80
Front panel keys do not function 82
Emergency Stop does not function 82
Pointing angles incorrect 82
No antenna drive 83
No tracking signal 84

8. WARRANTY & REPAIR **85**
Warranty 85
Repair Service 85
Repairs not under Warranty 86

APPENDICES ..... See separate appendices index 87

Downloaded from www.Manualslib.com manuals search engine

Chapter 4: Service Information

Theory of Operation 25
Z-80A System Operation 26
Select Code Recognition 26
Interrupt System 27
Interface Reset 27
Shared Memory Controller 28
Addressing 28
Read/Write Control 28
Clock Circuits 28
Memory Access Select Timing 29
Memory Cycle Timing 29
Hardware Registers 31
Shared RAM 32
Default Switches 33
Baud Rate Multiplexer 33
Line Drivers and Receivers 33
Replacement Parts 34

ADVENT®

36 MONTH LIMITED WARRANTY

Applies to Bluetooth Automotive/Cellular Interface Products.

AUDIOVOX Electronics Corp. (the Company) warrants to the original retail purchaser of this product that, should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 36 months from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge for parts.

Simply call toll free to our control office for reference to the authorized Warranty Station in your area and to obtain an Authorization number. No repairs or replacement will be made without a valid Authorization number.

TRAVELER'S WARRANTY SERVICE 1-800-645-4994

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), authorization number, specification of defect(s), transportation prepaid, to an approved warranty station. This warranty is not transferable.

This Warranty does not cover damage to vehicle electrical system. This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s).

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 48 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

The Company does not warrant that this product cannot be compromised or circumvented. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER FOR THE PRODUCT.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

128-8437

- **TRAVELER'S WARRANTY DEPARTMENT**
- **AUDIOVOX ELECTRONICS CORPORATION**
- **150 MARCUS BLVD HAUPPAUGE, NEW YORK 11788**

Downloaded from www.Manualslib.com manuals search engine

False Alarm Prevention (cont'd)

Statistics verify that more than 75% of all false alarms are caused by alarm system operators

Of these, at least 7 out of 10 are simple errors made by a user while turning the system on or off or when leaving or entering the building. Other typical causes are:

- Entering an area or opening a door or window whose protection has been turned on.
- Animals or large insects roaming through areas with protection turned on.

False alarms on fire-monitored systems are typically caused by burning food, heavy smoking in a room, or steam from a shower.

Working as a team, you and ADT must have a goal of zero false alarms

In many cities, the municipal government and police department are attempting to make alarm system users more aware of their responsibility to reduce false alarms by:

- Requiring permits for alarm system users issued by licensed security companies.
- Charging fines for multiple false alarms and, in some areas, escalating fines if false alarms persist.
- Refusing to respond to an alarm when the rate of false alarm signals remains high.

You must help eliminate false alarms

By installing this dependable, state-of-the-art FOCUS® 200 PLUS system, which is monitored by ADT Security Systems, you have already taken the first step.

Downloaded from www.Manualslib.com manuals search engine

3-3. BLOCK DIAGRAM – POWER SECTION –

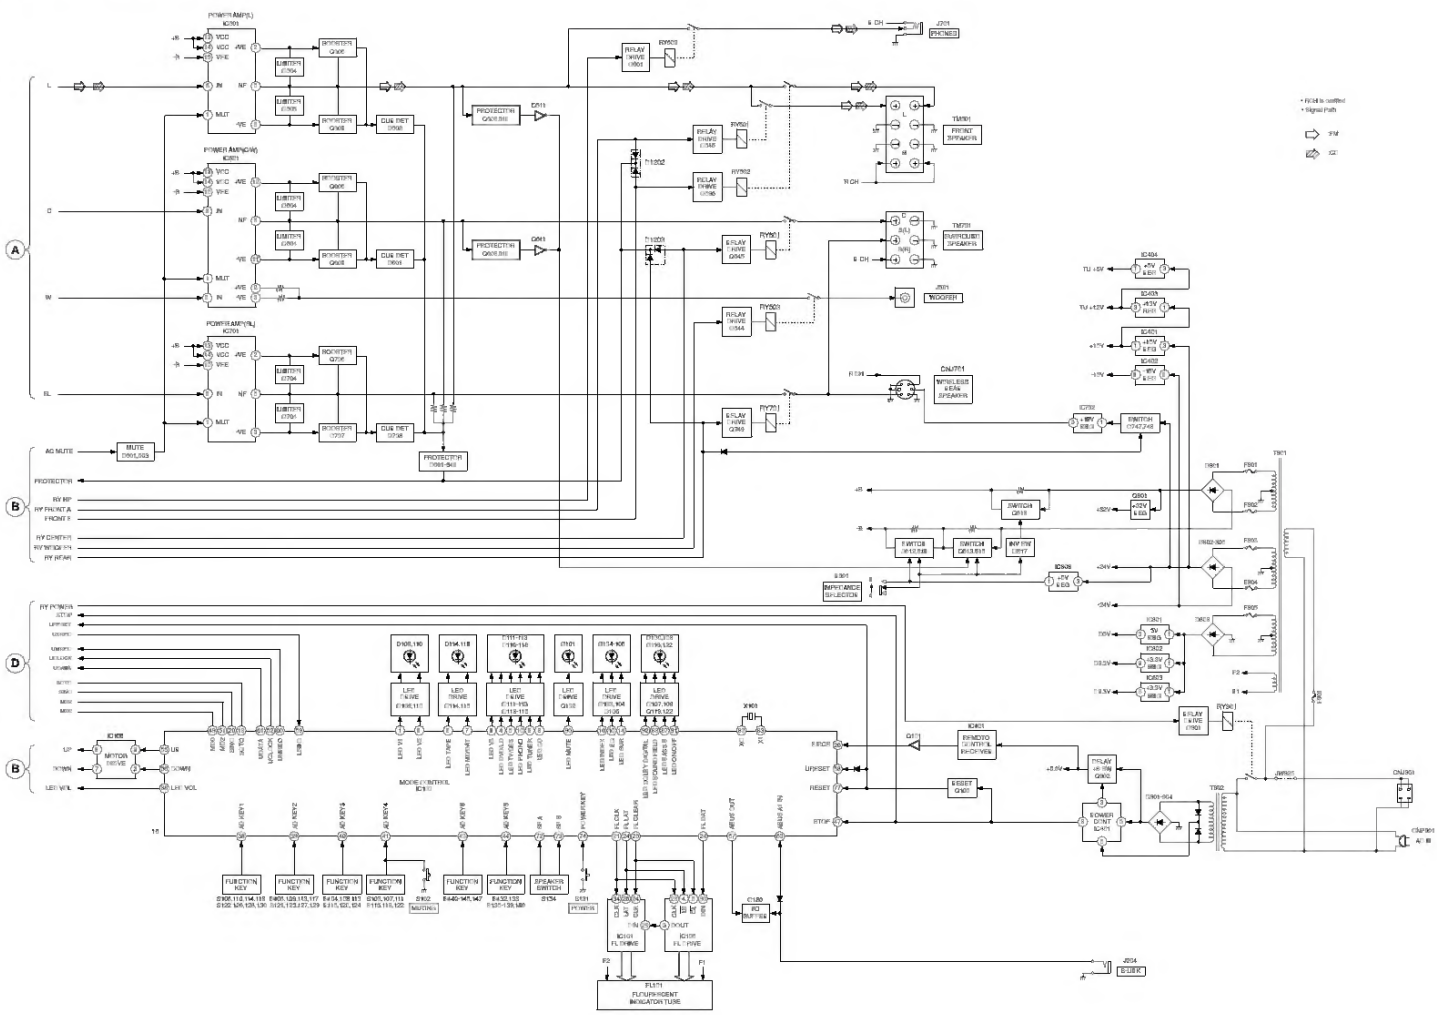

Downloaded from www.Manualslib.com manuals search engine

Step 3 Click **Next**.

Step 4 Select a printer that is connected to the print server and click **Next**.

Note: If you have more than one printer connected to the print server, you'll need to re-run the **PS Wizard** again to setup the other printers.

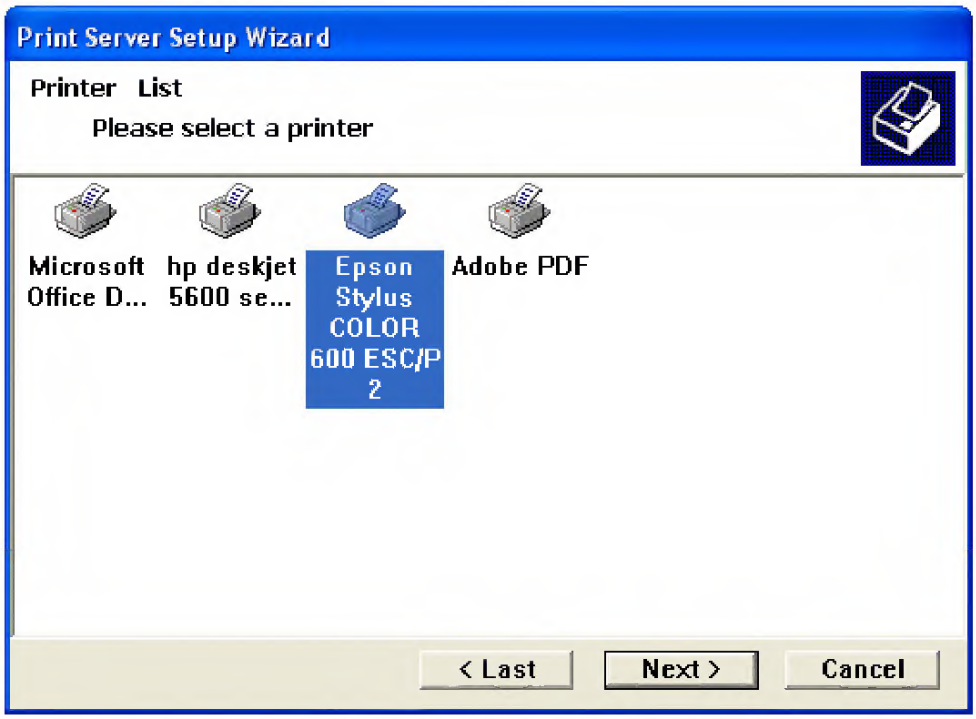

Downloaded from www.Manualslib.com manuals search engine

TO CANCEL THE COUNTDOWN

If you change your mind and want to cancel the 'Countdown', press the Selector Control button until the 'Countdown' indicator (→|) flashes and then the decrease control (-) until 0 00 shows in the display as Fig 5 The 'Countdown' indicator (→|) will continue to flash for a few seconds and then return to the time of day

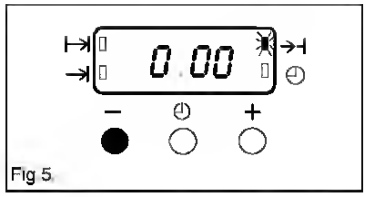

Fig 5

SETTING THE OVEN TIMER CONTROL

The main oven can be automatically timed

When using the timer control for the very first time, it is advisable to let it operate while you are at home The displays can be checked to show that it is operating correctly and you will feel confident to leave a meal to cook automatically in the future

A) TO SET THE TIMER TO SWITCH ON AND OFF AUTOMATICALLY

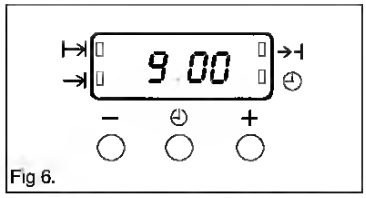

Fig 6.

i) Ensure the electricity supply is switched ON and that the correct time of day is displayed, e g 9 a m as Fig 6

ii) Place food in oven

iii) To set the length of cooking time, press the Selector control button (◴) until the 'Cook Time' indicator is illuminated (|→|) Press the increase control (+) until the required length of cooking time is displayed, e g 2 hrs 15 mins as Fig 7 If necessary depress the decrease control (-) until the correct time interval is achieved

The maximum cooking time is 10 hours

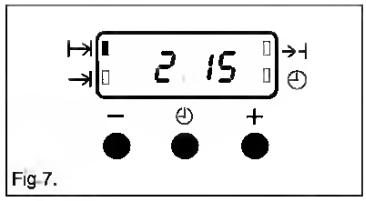

Fig 7.

iv) Release the buttons The 'Cook Time' indicator (|→|) will be illuminated

Remember, this must be completed within 5 seconds of first pressing the Selector Control button.

v) To set the 'End Time' Press the Selector Control button until the 'End Time' (→|) flashes Press the increase control (+) until the required stop time is displayed, e g 12 15 p m as Fig 8 If necessary depress the decrease control (-) until the correct time interval is achieved

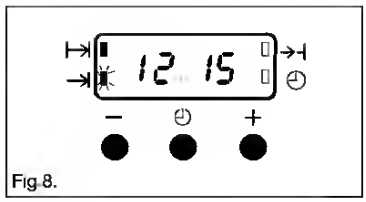

Fig 8.

vi) Release the buttons The time of day will be displayed after 5 seconds The 'Cook Time' (|→|) and 'End Time' (→|) indicators will be illuminated

The 'End Time' must not be more than 23 hours 59 minutes from the time of day For example, if the time of day is 09 00 a m , the latest 'End Time' would be 08 59 a m the next day

vii) Set the main oven control to the required temperature The oven indicator neon should be OFF

When the automatic timed period starts, the oven indicator neon will turn ON and OFF periodically during cooking, showing that the temperature is being maintained

Downloaded from www.Manualslib.com manuals search engine

TAPE PLAYBACK

Press the following buttons to operate tape transport.

To do this	Press this button
Eject the cassette	⏏
Change the playback side Stop fast-forwarding or rewinding and resume playback	DIR
Fast-forward either side of the tape	FF ▲
Rewind either side of the tape	▼ REW
Stop the tape and turn the unit off	MUTE (for more than 2 seconds)

- At the end of the tape in Fast Forward mode, the other side of the cassette will start playing automatically.
- At the end of the tape in Rewind mode, the same side will start playing automatically.

Direction indications

FWD	Displayed when the upper side of the cassette is being played.
REV	Displayed when the lower side of the cassette is being played.

Tape transport display

When you start tape playback, the transport display indicates the tape movement.

Upper side: During playback, fast-fowarding Lower side: During rewinding	
Lower side: During playback, fast-fowarding Upper side: During rewinding	

During fast-forwarding or rewinding, the transport display accelerlates.

Before turning the ignition off

Be sure to eject any cassette from the unit before turning the ignition off.

Switching modes

When the unit is in Radio or CD Changer Play mode, inserting a cassette switches the unit to Tape Play mode automatically.

To prevent tape problems

Before inserting a cassette into the unit, make sure that there is no slack in the tape. If necessary, take up the slack by inserting a pencil into the spindle hole and winding.
Tapes of 90 minutes or longer are extremely thin and easily deformed or damaged. They are not recommended.

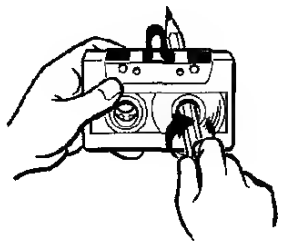

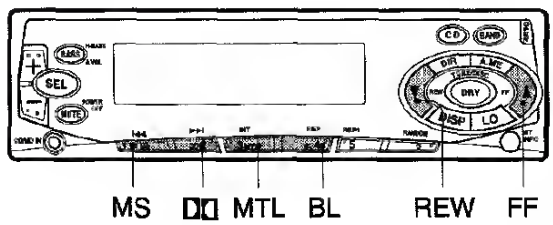

To play tapes recorded with Dolby B NR

Press DOLBY (the Dolby NR button) when playing a tape recorded in this mode. The "DOLBY B" indicator lights up.
Press this button again to cancel this mode.

Note

If a tape recorded without Dolby B NR is played back in Dolby B NR mode, the sound will not be reproduced properly

To play metal tapes

Press MTL (metal) when playing a metal or CrO_2 tape. The "MTL" indicator lights up.
Press this button again to cancel this mode.

Downloaded from www.Manualslib.com manuals search engine

5.2 Main Panel Functions

The display window shows live TV or recorded videos. You can drag it anywhere on the screen or adjust its size by double-clicking it to switch to full-screen and double-clicking the screen again to return to its original size. The TVR has six major parts.

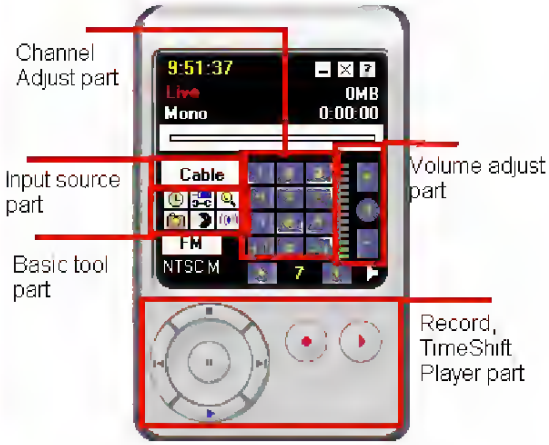

5.2.1 Information Window

The Information Window displays the current status of the TVR, including video status, (Live, REC, Playback, Time Shifting) sound status, (Mono, Stereo, or SAP), recording time, recording file size, and the current time.



5.2.2 Basic Tool Part

The Basic Tool has seven buttons. You can click on each button for more specific functions. For detailed instructions on each button, please refer to the following sub-sections.

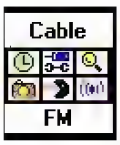

Antenna: Input source switch: click on this button to switch your video source

: Scheduling: schedules recording date/time

: Setup: opens the TV Setup Utility

: Channel preview: previews all available channels

: Snapshot: takes a snapshot of the current image in the display window

: Sleeping timer: configures the sleeping timer

: TV sound switching: select from Mono, Stereo, or SAP (for TV only)

Downloaded from www.Manualslib.com manuals search engine

2. Wire It Up! (cont'd)

4. Connect the Audio Out of your PC to the Audio In on your TV or VCR. This will send recorded audio from your PC out for recording or listening on your TV or VCR.

Connect the Right and Left RCA jacks of the **(F) 9 ft. Audio out to TV/VCR cable** to the Audio Inputs on your TV or VCR.

Connect the 3.5mm stereo jack to the Line Out or Speaker jack on your sound card.

If you do not have a "Line Out" jack you can connect this cable to your "Speaker Jack". Then you can plug your speakers into the "Y" female 3.5mm jack

Sound Card Color Coded Connectors:
Audio Line-In = Light Blue
Audio Line-Out = Lime Green
Microphone = Pink
Speaker Out/Subwoofer = Orange
Right to Left Speaker = Brown

**Sound Card Connector color codes according to PC-99 spec.*

A/V Source

PC Sound Card

Downloaded from www.Manualslib.com manuals search engine

COMPAQ

maintenance & service guide

Presario 1600XL Series

Model 1600T, 1600-XL140, 1600-XL141, 1600-XL142, 1600-XL143, 1600-XL144, 1600-XL146, 1600-XL147, 1600-XL150 XL156, XL157, XL255, XL256, XL257, and XL258

Left-Side Components with Diskette Drive

No.	Description	No.	Description
❶	Security Slot	❹	CD or DVD Manual Eject Hole
❷	CD or DVD Drive	❺	Diskette Drive
❸	CD/DVD Eject Button	❻	Diskette Drive Eject Button

Downloaded from www.Manualslib.com manuals search engine

2 Network Settings

2-1 PC Network Settings

Provisional registration | Registration : Administrator/User

Set the IP Address, Subnet Mask, and other necessary information on the PC of the person setting up the network, the Administrator PC, and the User PCs, according to the network environment.

1. From the Windows "start" menu, select "Control Panel" → "Network Connections", then click "Properties" on "Local Area Connection".
   - The "Local Area Connection Properties" window appears.

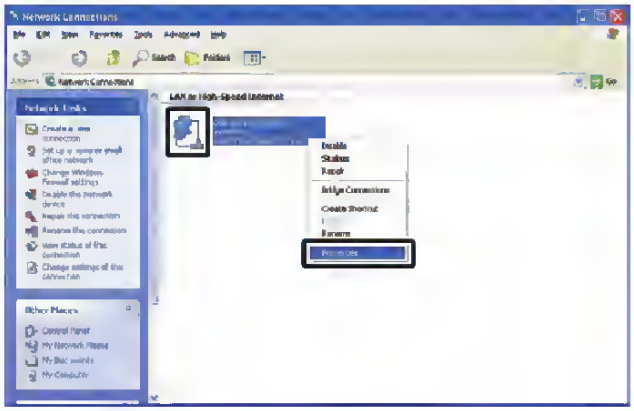

2. Select "Internet Protocol (TCP/IP), then click "Properties".
   - The "Internet Protocol (TCP/IP) Properties" window appears.

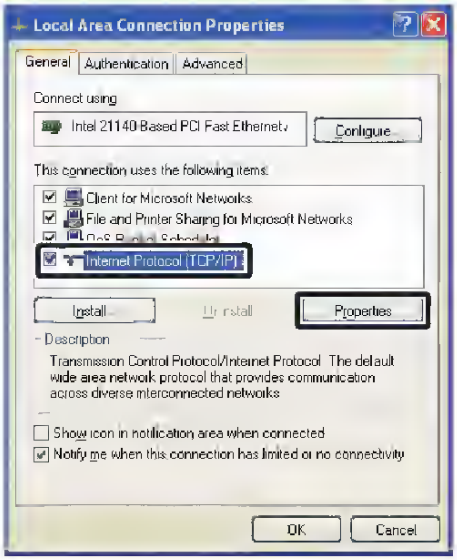

3. Enter the IP Address, Subnet Mask, and other necessary information according to the network environment, then click [OK].
   - For provisional registration, enter "192.168.0.10" as the IP Address and "255.255.255.0" as the Subnet Mask. All other items besides the IP Address and Subnet Mask may be left blank.

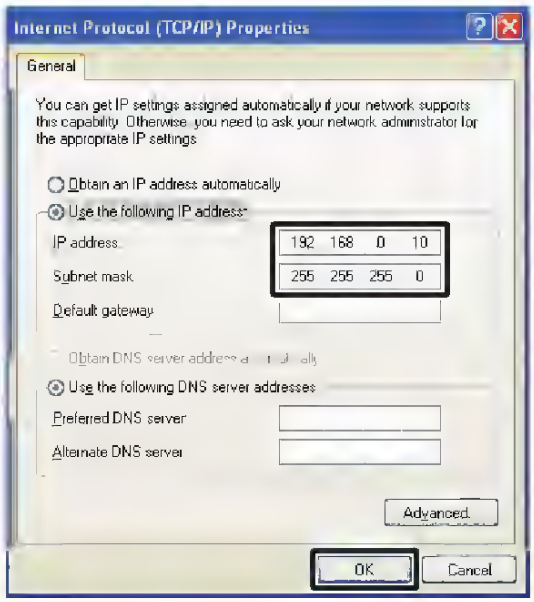

   - Click [OK] to return to the "Local Area Connection Properties" window.

4. Click [OK].
   - The PC Network Settings are now completed.

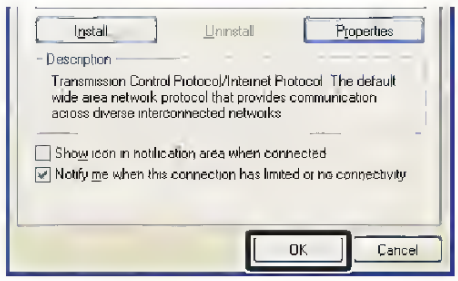

   - For provisional settings, after the IP Video Intercom Adaptor settings are completed, be sure to restore the PC network settings to their original status.

Downloaded from www.Manualslib.com manuals search engine

Grill only cooking

This mode can be used to Grill/Brown food.

Example: To make toast for 4 minutes.

1. Press the grill button once.

2. Enter the time by rotating the TIMER/WEIGHT knob clockwise/ anti-clockwise until 4:00 is displayed.

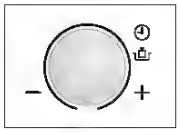

3. Press the START/QUICK button.

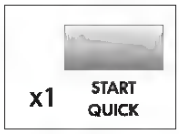

4. Check the display:

Dual grill cooking

This mode uses a combination of Grill power and Microwave power (90 W to 630 W). The microwave power level is preset to 270 W.

Button	Power setting
Grill x 1	0 W
Grill x 2	270 W
Grill x 3	450 W
Grill x 4	630 W
Grill x 5	0 W

Example: To cook grill skewers for 7 minutes on DUAL GRILL (450 W).

1. Press the grill button 3 times.

2. Enter the time by rotating the TIMER/WEIGHT knob clockwise/ anti-clockwise until 7:00 is displayed.

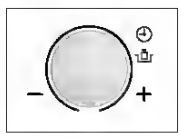

3. Press the START/QUICK button.

4. Check the display:

Downloaded from www.Manualslib.com manuals search engine

✓ **100Mbps**

On : When the LED lights on, the respective port is connected to a 100Mbps Ethernet network.

Off : The respective port is connected to a 10Mbps Ethernet network, or no link

Port 25 & Port 26 Status LEDs

✓ **LINK/ACT**

On : When the LED lights on, the respective port is connected to a 10/100/1000Mbps Ethernet network.

Blinking : When the LED is blinking, the respective port is transferring or receiving data on a 10/100/1000Mbps Ethernet network.

Off : No link.

✓ **1000Mbps**

On : When the LED lights on, the respective port is connected to a Gigabit Ethernet network.

Off : The respective port is connected to a 10/100Mbps Ethernet network, or no link.

✓ **100Mbps**

On : When the LED lights on, the respective port is connected to a 100Mbps Fast Ethernet network.

Off : The respective port is connected to a 10Mbps or Gigabit Ethernet network, otherwise, no link.

Downloaded from www.Manualslib.com manuals search engine

Problem Solving Tips

Picture Problems

Note: Below described problems are all related to the TV settings. The procedures to change the value (or status) of the different settings are described.

No colors / noise in picture

1. Press the MENU button on the remote control.
2. Select the INSTALLATION sub menu.
3. Select and change the SYSTEM setting until picture and sound are correct.
4. Select the STORE menu item.

Colors not correct / unstable picture

1. Press the MENU button on the remote control.
2. Select the INSTALLATION sub menu.
3. Select and change the SYSTEM setting until picture and sound are correct.
4. Select the STORE menu item.

Picture too dark or too bright

Increase / decrease the BRIGHTNESS and / or the CONTRAST value when:

- The picture improves after you have pressed the "Smart Picture" button on the remote control.
- The picture improves after you have switched on the Customer Service Mode

The new "Personal" preference value is automatically stored.

White line around picture elements and text

Decrease the SHARPNESS value when:

- The picture improves after you have pressed the "Smart Picture" button on the remote control.

The new "Personal" preference value is automatically stored.

Snowy picture

- No or bad antenna signal. Connect a proper antenna signal.
- Antenna not connected. Connect the antenna.
- No channel / pre-set is stored at this program number. Go to the INSTALL menu and store a proper channel at this program number.
- The tuner is faulty (in this case the CODES line will contain error number 10). Check the tuner and replace / repair if necessary.

Snowy picture and/or unstable picture

- A scrambled or decoded signal is received.

Black and white picture

Increase the COLOR value when:

- The picture improves after you have pressed the "Smart Picture" button on the remote control.

The new "Personal" preference value is automatically stored.

Menu text not sharp enough

Decrease the CONTRAST value when:
The picture improves after you have pressed the "Smart Picture" button on the remote control.
The new "Personal" preference value is automatically stored.

Sound Problems

No sound or sound too loud (after channel change / switching on)

Increase / decrease the VOLUME level.
Press the Smart Sound button repeatedly to access 4 different types of sound settings and choose your desired setting.

Downloaded from www.Manualslib.com manuals search engine

- Hvis enheten ikke kunne brukes, eller hvis det var en termisk unormal situasjon, kan du plugge inn USB-porten igjen.
- Hvis du fortsatt har problemer etter å ha fulgt løsningsforslagene, kontakter du forhandleren eller et autorisert servicesenter for å få assistanse.
- Hvis du vil ha mer informasjon om PREDATOR-tilbehør, kan du besøke PREDATOR-nettstedet på www.acer.com/predator

Miljø

Temperatur:

- Drift: 0 °C til 40 °C
- Ikke i bruk: -20 °C til 60 °C

Luftfuktighet (ikke-kondenserende):

- Drift: 10% til 85%
- Ikke i bruk: 10% til 95%

Produsentadresse

Acer Inc.

8F, 88, Sec. 1, Xintai 5th Rd. Xizhi, New Taipei City 221, Taiwan

Europa – EU-samsvarserklæring

Vi erklærer under eget ansvar at dette produktet overholder følgende standarder i samsvar med bestemmelsene i Europa-rådets RoHS-direktiv (2011/65/EU), EMC-direktivet (2014/30/EU) og lavspenningsdirektivet (2014/35/EU) utstedt av EU-kommisjonen.

Dette produktet må ikke kastes sammen med annet husholdningsavfall, men behandles i samsvar med lokale bestemmelser. Kontakt kommunale instanser, renovasjonstjenesten eller butikken der du kjøpte produktet.

Besøk www.acer.com/predator for garantiinformasjon.

1.2 The Pathfinder Radar Display

When a scanner is connected and the radar is in Transmit mode, the radar picture provides a map-like representation of the area in which the radar is operating. Typically, your ship's position is at the centre of the display, and its dead ahead bearing is indicated by a vertical heading line, known as the Ship's Heading Marker (SHM).

The radar picture can be viewed with a variety of fixed or customised range scales. A status bar at the top of the radar image displays range, current heading and mode indicators for the various options you can set.

An example radar picture is shown on the next page, with example radar returns (echoes) and default Pathfinder Radar information. The Status Bar indicator is also illustrated.

The radar display can show additional information, depending on your currently selected options, set up selections and the data available from other equipment. The example displays on the following pages show some of these features.

Functions are available to control the display as follows:

- Zoom the Display
- Offset your vessel from the centre of the radar picture

Operation of these functions is described in *Chapter 2*.

Pathfinder Radar Display Options

Set up options allow you to customise the radar image by choosing what is displayed, how it is displayed (including language and units), heading mode and how the radar operates with other HSB units. You can also view the cursor position and a variety of data from other equipment, e.g. speed, heading, depth, wind and tide information in a set of user-selectable data boxes. The cursor box and user-selected data boxes can be moved around the screen and they can be turned on or off.

Display options are provided in System Set Up and Radar Set Up as described in *Chapter 7*. In addition, Screen Presentation Options, described in *Chapter 2* are provided to switch:

- Cursor Box and Databoxes On/Off
- Range Rings On/Off
- Waypoint Display On/Off

Note: *When you turn the display off and on again, these settings are retained in memory.*

Downloaded from www.Manualslib.com manuals search engine

2. Remove the key from the main switch if the scooter will be left unattended.

NOTE:
Make sure that the seat is properly secured before riding.

EAU14510

Storage compartment A

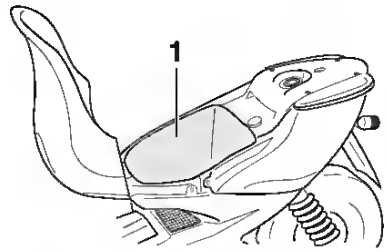

1. Storage compartment A

There is a storage compartment under the seat. (See page 3-8.)

EWA10960

⚠ WARNING

- **Do not exceed the load limit of 3.0 kg (6.6 lb) for the storage compartment.**
- **Do not exceed the maximum load of 180 kg (397 lb) for the vehicle.**

ECA10060

CAUTION:

Keep the following points in mind when using the storage compartment.

- **Since the storage compartment accumulates heat when exposed to the sun, do not store anything susceptible to heat inside it.**
- **To avoid humidity from spreading through the storage compartment, wrap wet articles in a plastic bag before storing them in the compartment.**
- **Since the storage compartment may get wet while the scooter is being washed, wrap any articles stored in the compartment in a plastic bag.**
- **Do not keep anything valuable or breakable in the storage compartment.**

To store a helmet in the storage compartment, place the helmet upside-down with the front facing forward.

NOTE:

- Some helmets cannot be stored in the storage compartment because of their size or shape.
- Do not leave your scooter unattended with the seat open.

Downloaded from www.Manualslib.com manuals search engine

To navigate forward and backward in your browser's history, view your bookmarks, adjust browswer settings, and perform other tasks, tap the **Menu** icon.

Chrome enables you to open multiple tabs. When a page is open, tap the small **New tab** button. Simply tap one of the open tabs across the top of the screen to switch pages.

Setting up the Email application

The Email application enables you to access email from most popular email providers. Most accounts can be set up in two steps. Open the application menu and then tap **Email** to start setting up your email access.

Enter your email address and password tap **Manual setup** to enter the parameters manually or simply tap **Next** to finish the setup process.

The combined inbox feature of your tablet allows you to view emails from multiple accounts in a single inbox.

Downloaded from LpManual.com Manuals

Downloaded from www.Manualslib.com manuals search engine

Image (Computer / Video Mode)

Keystone

- Adjust image distortion caused by tilting projection. (±16 degrees)

Aspect Ratio

Use this function to choose your desired aspect ratio.

- Auto : Keep the image with original width-higth ratio and maximize the image to fit native horizontal or vertical pixels.
- 16:9 : The input source will be scaled to fit the width of the screen and narrowed the height to make the displayed image becomes 16:9 ratio.
- 4:3 : The input source will be scaled to fit the projection screen and becomes 4:3 ratio.

Projection

- **Front-Desktop**
  The factory default setting.
- **Front-Ceiling**
  When you select this function, the projector turns the image upside down for ceiling-mounted projection.
- **Rear-Desktop**
  When you select this function, the projector reverses the image so you can project behind a translucent screen.
- **Rear-Ceiling**
  When you select this function, the projector reverses and

Downloaded from www.Manualslib.com manuals search engine

5.4.2 Dismantling the welding mechanism

Dismantling

- ► Disassemble the welding mechanism from the base plate (chapter 5 4 1)
- ► Undo cylinder screw # 104 and remove the belt guard # 221
- ► Remove the cylinder screw # 164. For this purpose, hold the eccentric shaft # 155 on the opposite side using a 5 mm open-ended spanner.
- ► Remove the toothed belt # 162 along with washer # 163 and pinion # 161.
- ► Remove the cylinder screw # 102.
- ► The entire unit can now be disassembled easily according to the exploded drawing.

Fitting

- ► Carry out assembly in the reverse order. However, before the cylinder screw # 104 is tightened, the centring screw # 101 must be positioned in order to ensure for the correct positioning.
- ► Tighten centring screws # 101 with a torque of 6 0 Nm.
- ► Tighten the cylinder screw # 164 with a torque of 4 3 Nm, the cylinder screw # 102 with 1 3 Nm and the cylinder screw # 104 with a torque of 0 6 Nm.

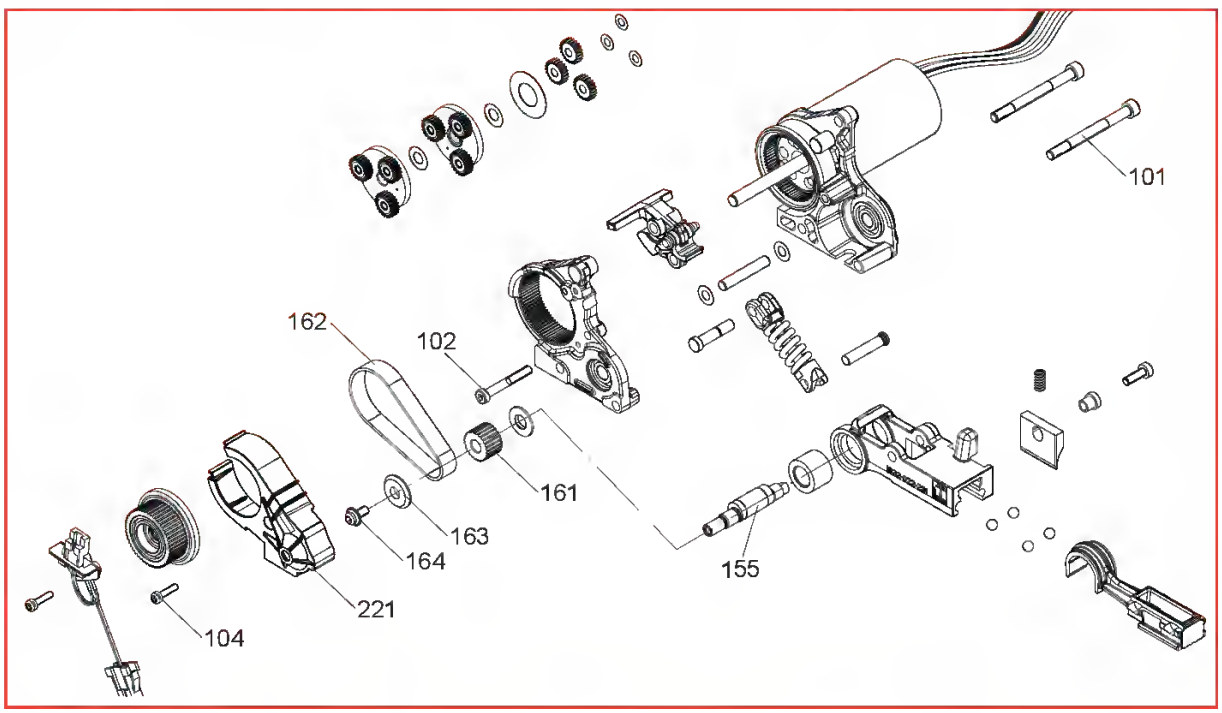

PARTS INDEX | INDICE DE LAS PARTES | NOMENCLATURE

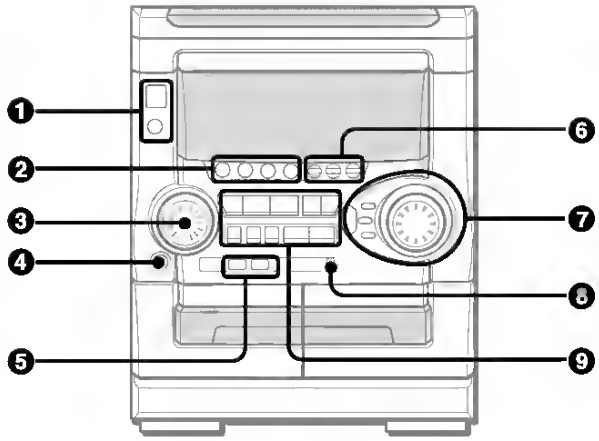

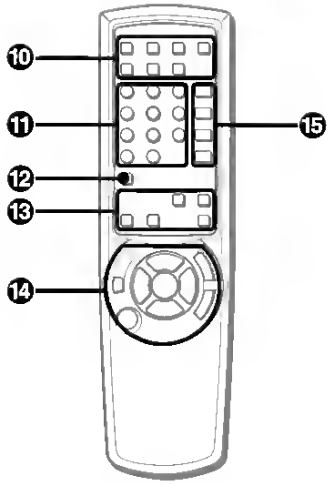

Name/Nombre/Nome	Page/Página/Pág.
❶ POWER ⏻STANDBY/ON	7
ECO	7
❷ TAPE DECK 1/2	11,15
TUNER BAND	10
VIDEO/AUX	23
CD	12,16,17
❸ VOLUME	9
❹ PHONES	9
❺ SYNC DUB	15
●REC/REC MUTE	14-17
❻ DOLBY PRO LOGIC	18,19
T-BASS	9
BBE	9
❼ GRAPHIC EQUALIZER (ROCK,POP,CLASSIC)	9
MULTI JOG	7,8,10-12,16,17,20,21
ENTER	7,8,20
❽ TIMER	20
❾ ❚❚SET	7,8,10-12,14,20,22
■CLEAR	7,8,10-17,22
►PRESET	7,10-13,22
⏮/◄◄DOWN	8-13,16-23
►►⏭/►►UP	8-13,16-23
DISC DIRECT PLAY1-3	12,13,16,17
DISC CHANGE	12
⏏OPEN/CLOSE	12

Name/Nombre/Nome	Page/Página/Pág.
❿ TIMER	20
SLEEP	21
MONO TUNER	10
CLOCK	8
CD EDIT/CHECK	12,16,17
PRGM	13
RANDOM/REPEAT	13
⓫ 0-9,+10	10,12,13,16,17
⓬ DISC DIRECT PLAY	12,13,16,17
⓭ MANUAL SELECT	9,18,19
DOLBY PRO LOGIC	18,19
T-BASS	9
GEQ	9
⏏OPEN/CLOSE	12
⓮ ⏮/◄◄DOWN	8-13,16-23
►►⏭/►►UP	8-13,16-23
❚❚SET	7,8,10-12,14,20,22
■CLEAR	7,8,10-17,22
►PRESET	7,10-13,22
VOL (∧,∨)	9
POWER	7
⓯ TAPE DECK 1/2	11,15
TUNER BAND	10
VIDEO AUX	23
CD	12,16,17

For assistance and information

call toll free 1-800-BUY-AIWA (United States and Puerto Rico)

Printed in Malaysia

AIWA CO.,LTD.

Downloaded from www.Manualslib.com manuals search engine

- Type the User Password and press <**Enter**> to use the computer. If you enter the password incorrectly, a warning message appears. Try again and press <**Enter**>.

Important

You have three chances to enter a password. If you fail to enter the password correctly after three tries, the system halts. Press and hold the power button for four seconds to shut down the computer. Then turn on the computer again, and try again.

Downloaded from www.Manualslib.com manuals search engine

English

Federal Communications Comission Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The following local Manufacturer /Importer is responsible for this declaration:

Product Name:	Personal Computer
Model:	AcerPower S Series
Name of Responsible Party:	Acer America Corporation
Address of Responsible Party:	2641 Orchard Parkeay, San Jose CA 95134, U. S. A.
Contact Person:	David Lee
Phone No.:	408-922-5097
Fax No.:	408-922-5017

Downloaded from www.Manualslib.com manuals search engine

3. Place cleaned upper basket spray arm back in position against the connecting piece: press the two together firmly, until you feel them snap into place.

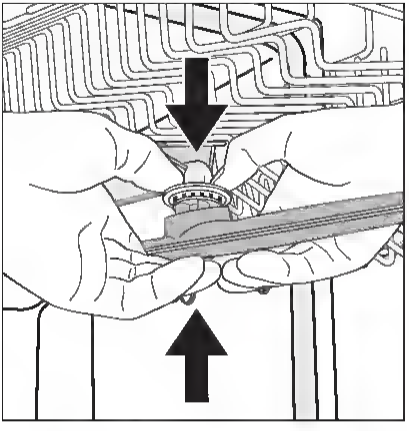

Bottom spray arm

1. To remove bottom spray arm, pull it upwards out of its catch.
2. Clean spray arm jets.
3. Place bottom spray arm back in position against connecting piece and press down firmly, until you feel it snap into place.

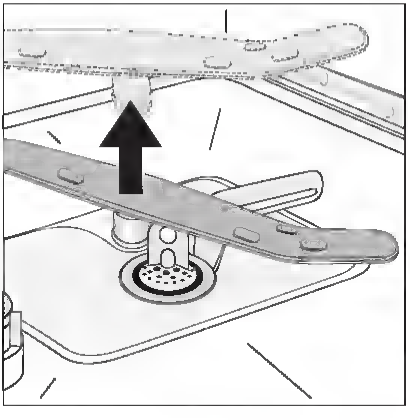

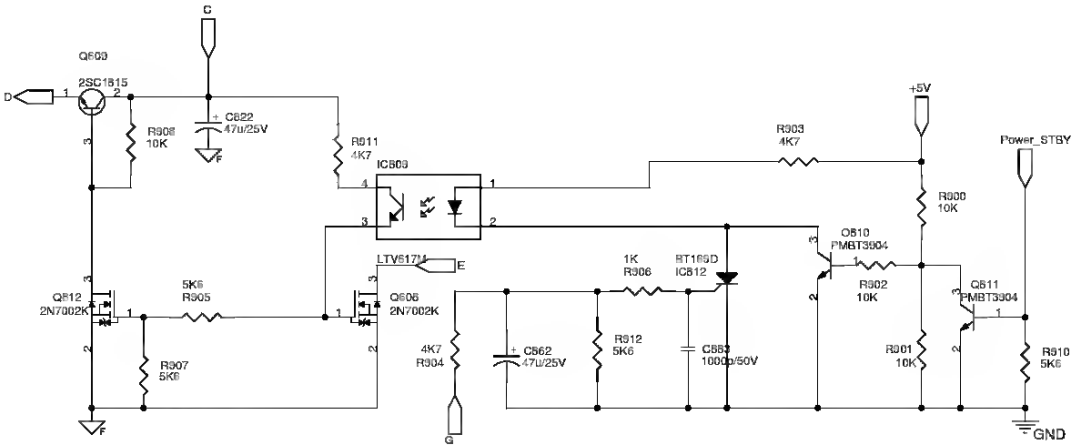

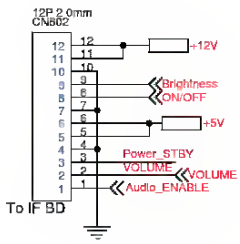

InnoLux	AL2623W	
Document Number : LP2610-DR4-02	SIZE : A4	APPRO BY :
TITLE : Standby power		CHECK BY :
DATE : 2006-09-12		DRAWN BY :
SHEET 4 OF 5	Rev : V01	

Downloaded from www.Manualslib.com manuals search engine

SETTING THE AUTO SOUND CONTROL

The Auto Sound feature allows the listener to select between four different factory set sound options. Personal (which can be set by the user), Theatre (for movie viewing), Music (for musical type programming) and Voice (when the program is mainly dialogue). These setting affect the Sound menu's Bass, Treble, AVL, and Incredible Surround controls

To select any of the options follow the directions below.

BEGIN

1. **Press the AUTO SOUND button** on the remote control. The current Auto Sound setting will appear in the middle of the screen.

2. **Press the AUTO SOUND button repeatedly** to toggle between the four settings.

Note: Only the **PERSONAL** control can be changed by the viewer. This changes the settings in the main on-screen menu's sound controls.

THEATRE - Preset sound options for watching movies.

MUSIC - Preset sound options for musical programming where there is little dialogue.

VOICE - Preset sound options for programming where heavy dialogue is present.

STOP

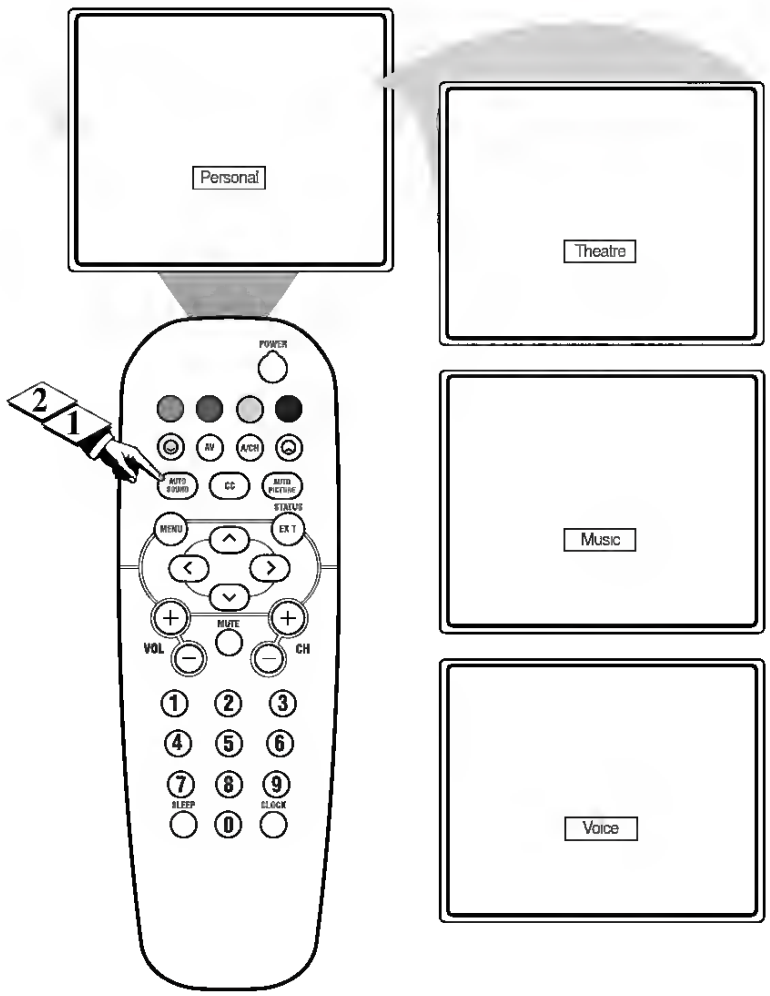

Downloaded from www.Manualslib.com manuals search engine

Save & Exit Setup

The Save & Exit Setup menu allows you to save changes made and close the Setup Utility.

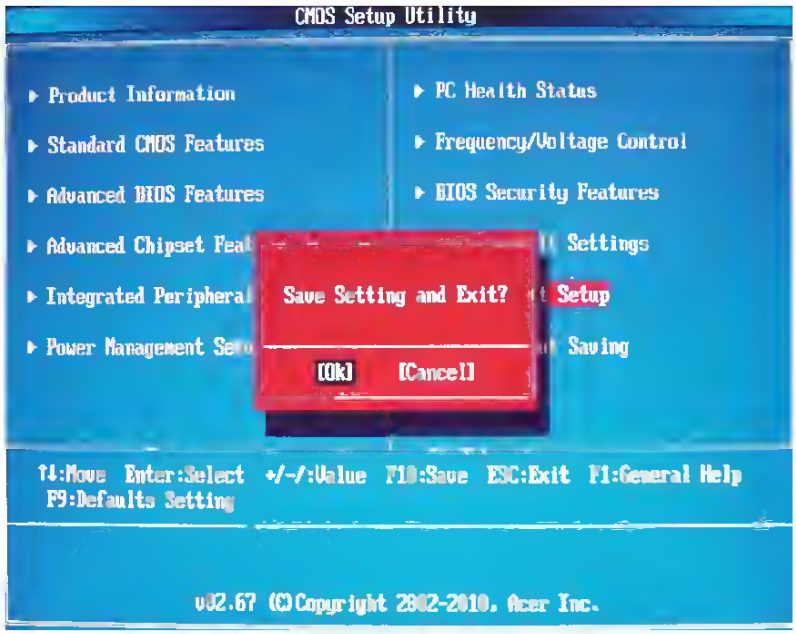

Downloaded from www.Manualslib.com manuals search engine

Control In/Chain In

Used as an EIA 232 port for connection to a computer or modem (Chain In); or another TSU (Chain Out).
See Table 2-2.

Connector Type - RJ48
pn - AMP# 555164-2

Table 2-2. Control In/Chain In Pin Connection

CONTROL PIN CONNECTION		
PIN	**NAME**	**DESCRIPTION**
1	GND	Ground-Connected to Unit Chassis
2	UNUSED	
3	RXDATA	Data Received by the TSU
4	UNUSED	
5	TXDATA	Data Transmitted by the TSU
6	UNUSED	
7	RI	Ring Indicate from Modem
8	UNUSED	

Downloaded from www.Manualslib.com manuals search engine

Maintenance

The projector needs little maintenance. You should keep the lens clean as dust, dirt or spots will project on the screen and diminish image quality. You will also need to clean the air filter located at the bottom of the projector periodically. It is important to keep the air filter clean because a clogged air filter prevents proper ventilation which is necessary to cool the projector and prevent it from overheating. The only part you should replace yourself are the lamp and the air filter. If any other parts need replacing, contact your dealer or qualified service personnel. When cleaning any part of the projector, always switch off and unplug the projector first.

Warning: Never open any of the covers on the projector except the lamp and air filter covers. Dangerous electrical voltages inside the projector can cause severe injury. Except as specifically indicated in this Instruction Manual, do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

Cleaning the Lens

Clean the lens whenever you notice dirt or dust on the surface. Wipe the lens surface gently with a soft, dry, lint-free cloth. To remove dirt or stains on the lens, moisten a soft cloth with water and a neutral detergent and gently wipe the lens surface.

Cleaning the Projector Housing

To clean the projector housing, first unplug the power cable. To remove dirt or dust, wipe the housing with a soft, dry, lint-free cloth. To remove stubborn dirt or stains, moisten a soft cloth with water and a neutral detergent. Then wipe the housing. Do not use alcohol, benzene, thinners or other chemical detergents as these can cause damage to the housing.

Cleaning the Air Filter

The air filter, which is located at the bottom of the projector, should be cleaned after every 100 hours of use. If it is not cleaned periodically, it can become clogged with dust and prevent the projector from being ventilated properly. This can cause overheating and damage the projector.

Downloaded From projector-manual.com Acer Manuals

Downloaded from www.Manualslib.com manuals search engine

Operation

Operation Instructions for Nonmetered and Coin Slide Dryers

IMPORTANT: Before using dryer for the first time, use an all-purpose cleaner, or a detergent and water solution, and a damp cloth to remove shipping dust from inside of dryer drum.

IMPORTANT: Remove all sharp objects from laundry to avoid tears and rips to items during normal machine operation.

Step 1: Clean Lint Filter

Clean lint filter before each use.

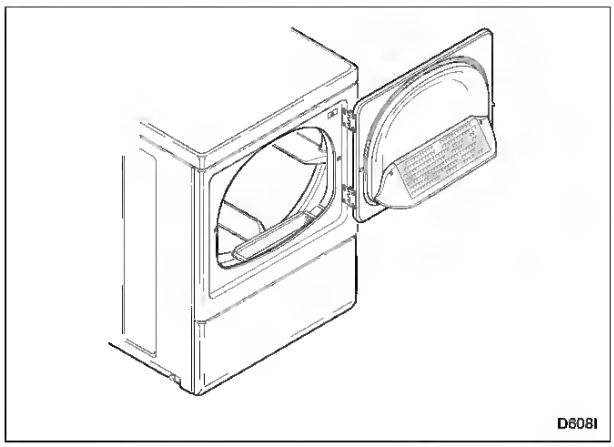

Figure 39

Step 2: Load Laundry

Load clothes loosely into dryer drum. Add fabric softener sheet if desired.

IMPORTANT: To avoid damage to dryer, do not use more than one fabric softener sheet per load.

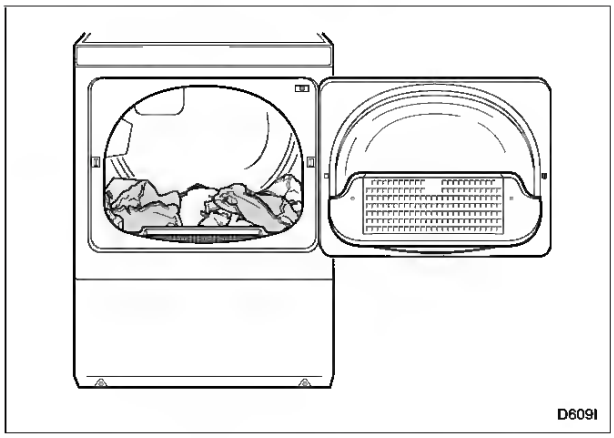

Figure 40

Step 3: Close Loading Door

Close loading door. Dryer will not operate with the door open.

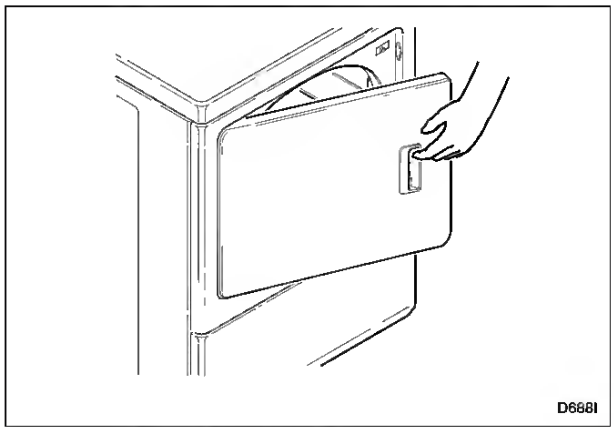

Figure 41

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Dear customer,

Before switching on your new appliance please read these operating instructions carefully. They contain important information for safe use, for installation and for care of the appliance. Please keep these operating instructions for future reference. Pass them on to possible new owners of the appliance.

These operating instructions are for use with several technically comparable models with varying accessories. Please observe the notes which apply to your model.

Notes which are important for your safety or for the proper functioning of the appliance are stressed with a warning triangle and/or with signal words **(Warning!, Caution!, Important!)**. Please observe the following carefully.

1. This symbol guides you step by step in the operation of the appliance.
2. .....

Supplementary information regarding operation and practical applications of the appliance appear after this symbol.

Tips and notes concerning economical and environmentally sound use of the appliance are marked with the cloverleaf.

Explanations of the technical terminology used in the operating instructions can be found at the end in the section "TechnicalTerminology". The operating instructions contain instructions for the correction of possible malfunctions by the user in the section "What to do if ...". If these instructions should not be sufficient, contact your local Service Force Centre.

Printed on paper manufactured with environmentally sound processes
he who thinks ecologically acts accordingly...

Downloaded from www.Manualslib.com manuals search engine

Configuring Wireless Security

This device provides complete wireless security function include WEP, 802.1x, WPA-TKIP, WPA2-AES and WPA2-Mixed in different mode (see the Security Support Table).

The default security setting of the encryption function is disabled. Choose your preferred security setting depending on what security function you need.

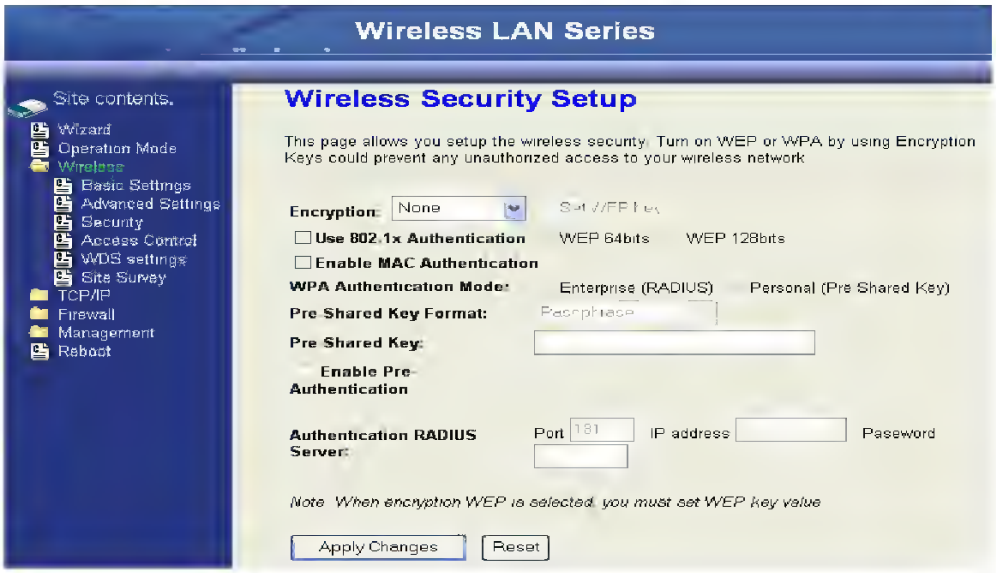

WEP Encryption Setting

Wired Equivalent Privacy (WEP) is implemented in this device to prevent unauthorized access to your wireless network. The WEP setting must be as same as each client in your wireless network. For more secure data transmission, you can change encryption type to "WEP" and click the "Set WEP Key" button to open the "Wireless WEP Key setup" page.

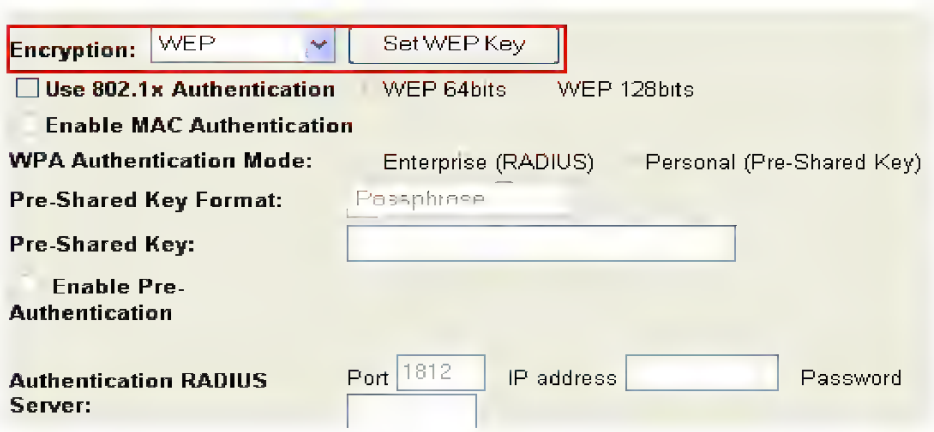

When you decide to use the WEP encryption to secure your WLAN, please

English

Tools

You can get projector IP information here, also can modify networking setting manually and set up password as wish.

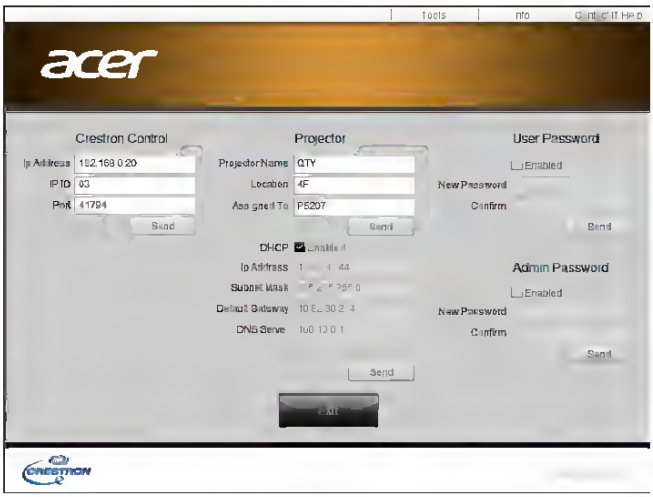

Info

You can find projector information easily by this page and also can add additional information to help you manage each projector.

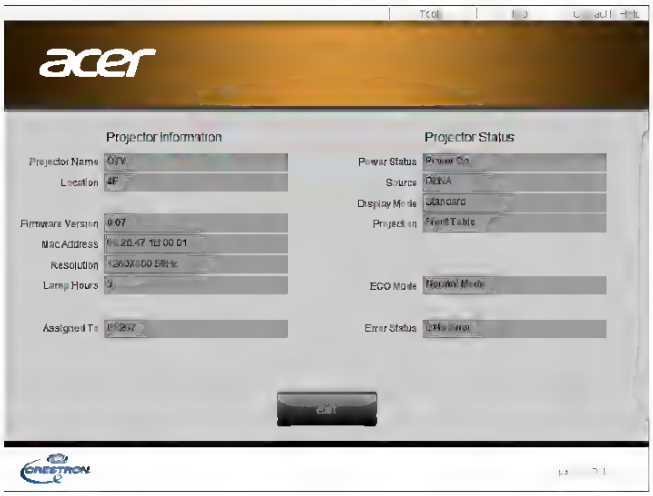

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Chapter 5:
Serial Number Definition

Acer 22 Barcode

Follows Code 128 standard –refer to http://www.adams1.com/pub/russadam/128code.html

Acer 22 Code SN

PPPPPPPPPPYWWSSSSSMMVV

Code	Description
PPPPPPPPPP	Acer Part Number
YWW	3 digit numenc year and week code
SSSSS	5 character unique hexadecimal code by manufacturer base and reset each week (0-9, A, B, C, D, E, F 16 code)
MM	Manufacturer code
VV	English version code

Acer SNID

YWWddddddMM

Code	Description
YWW	3 digit numenc year and week code (as above)
dddddd	6 unique decimal numbers derived from Acer 22 Code SN (SSSSS) Transfer Rule: $S_1S_2S_3S_4S_5$ dddddd = $S_1 * 16^4 + S_2 * 16^3 + S_3 * 16^2 + S_4 * 16^1 + S_5$ Example: Acer FG SN (SSSSS) = 001FD, SNID (dddddd) = $1 * 16^2 + 15 * 16 + 13$ = 000509.
MM	Manufacturer code (as above)

Downloaded from www.Manualslib.com manuals search engine

Pick out left sprak

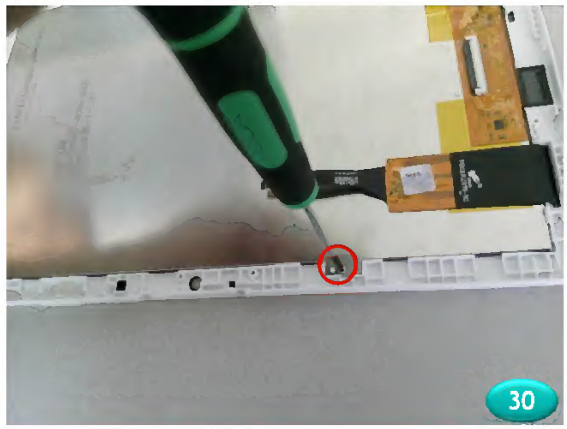

Pick out fasthern scew

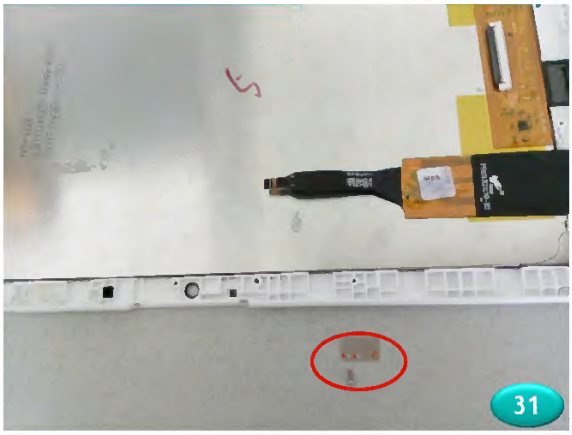

Pick out fasthern screw

Open
locker

English

Compatibility modes

A. VGA Analog

1 VGA Analog - PC Signal

Modes	Resolution	V.Frequency [Hz]	H.Frequency [KHz]
VGA	640x480	60	31.5
	640x480	72	37.9
	640x480	75	37.5
	640x480	85	43.3
	640x480	120	61.9
SVGA	800x600	56	35.1
	800x600	60	37.9
	800x600	72	48.1
	800x600	75	46.9
	800x600	85	53.7
	800x600	120	77.4
XGA	1024x768	60	48.4
	1024x768	70	56.5
	1024x768	75	60.0
	1024x768	85	68.7
	1024x768	120	99.0
SXGA	1152x864	70	63.8
	1152x864	75	67.5
	1152x864	85	77.1
	1280x1024	60	64.0
	1280x1024	72	77.0
	1280x1024	75	80.0
QuadVGA	1280x960	60	60.0
	1280x960	75	75.2
SXGA+	1400x1050	60	65.3
PowerBook G4	640x480	60	31.4
PowerBook G4	640x480	66.6 (67)	34.9
PowerBook G4	800x600	60	37.9
PowerBook G4	1024x768	60	48.4
PowerBook G4	1152x870	75	68.7
PowerBook G4	1280x960	75	75.0
i Mac DV (G3)	1024x768	75	60.0

Downloaded From projector-manual.com Acer Manuals

Downloaded from www.Manualslib.com manuals search engine

Memory

Compaq ProLiant 3000 Servers ship standard with either 128 MB or 256 MB Synchronous DRAM (SDRAM) Dual Inline Memory Modules (DIMMs)installed in the DIMM 5 socket location. Memory can be expanded to a maximum of 4 GB. Install SDRAM DIMM modules one at a time in tbe proper socket. See Figure 2-27 and Table 2-2.

The following guidelines **MUST** be followed when installing or replacing memory:

- Use only 32-, 64-, 128-, 256- or 512-MB SDRAM DIMMs.
- Use Compaq SDRAM DIMMs only.
- SDRAM DIMMs must all be rated 100 MHz and of the same manufacturer.

The recommended SDRAM DIMM installation order is:

- First SDRAM DIMM in socket 5
- Second SDRAM DIMM in socket 1
- Third SDRAM DIMM in socket 6
- Fourth SDRAM DIMM in socket 2
- Fifth SDRAM DIMM in socket 7
- Sixth SDRAM DIMM in socket 3
- Seventh SDRAM DIMM in socket 8
- Eighth SDRAM DIMM in socket 4

The following drawing shows the SDRAM DIMM socket locations.

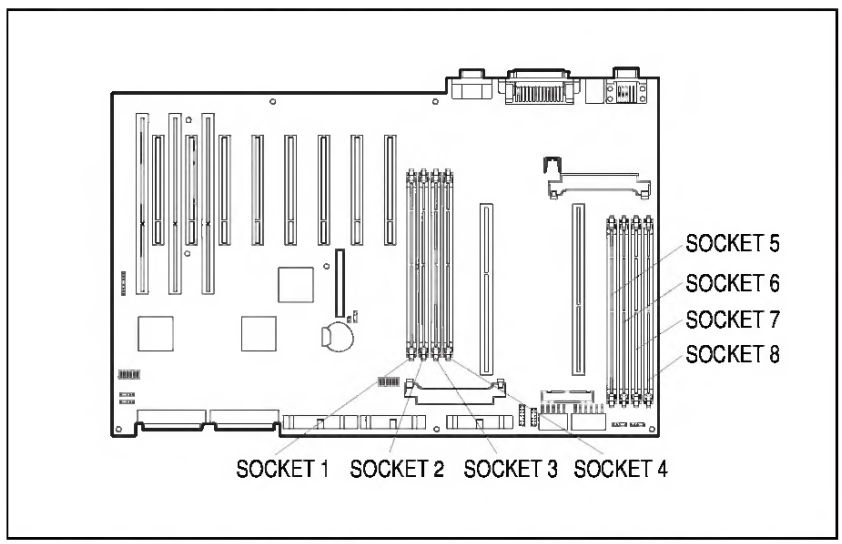

Figure 2-27. SDRAM DIMM socket locations

Downloaded from www.Manualslib.com manuals search engine

INSTALLATION INSTRUCTIONS

Important: Any electrical installation work must be carried out by a qualified electrician/competent person.

The oven must be installed according to the instructions supplied.

Technical Data

Oven Exterior Dimensions	
Height x Width x Depth	60 cm x 56 cm x 55 cm
Oven Interior Dimensions	
Height x Width x Depth	31 cm x 39.6 cm x 41 cm
Volume (useable)	54 l

Regulations, Standards, Directives

This appliance meets the following standards:

- EN 60 335-1 and EN 60 335-2-6
  in respect of the safety of electrical appliances for household use and similar purposes and
- DIN 44546 / 44547 / 44548
  in respect of the operating features of electric cookers for household use.
- EN 55014-2 / VDE 0875 part 14-2
- EN 55014 / VDE 0875 part 14/12.93
- EN 61000-3-2 / VDE 0838 part 2
- EN 61000-3-3 / VDE 0838 part 3
  in respect of the basic protection requirements for electromagnetic compatibility (EMC).

CE This appliance complies with the following EU directives:

- 73/23/EWG dated 19.02.1973 (Low Voltage Directive)
- 89/336/EWG dated 03.05.1989 (EMC Directive including Directive Amendment 92/31/EWG).

Downloaded from www.Manualslib.com manuals search engine